



FIG: 1: GBV326S Gasoline Engine Explosive Picture

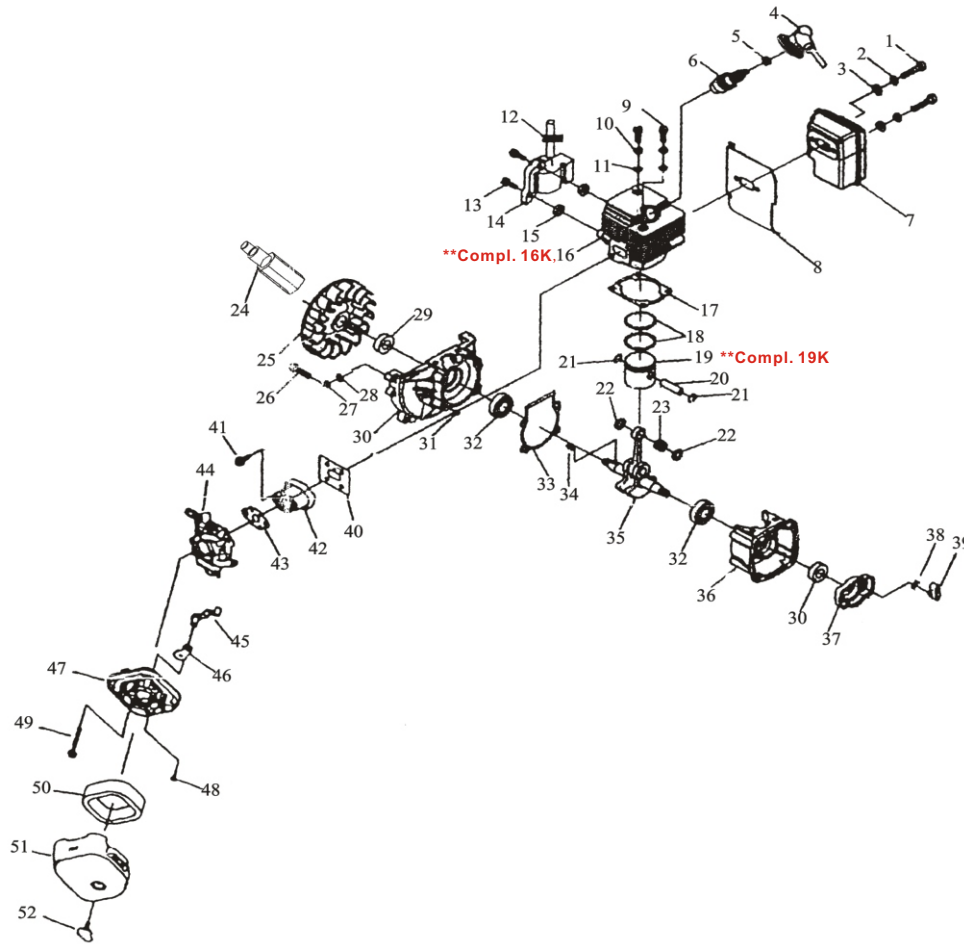

Ser.NO.	Code	Part Name	Qty	Ser.NO.	Code	Part Name	Qty
1-1	16326S101	SCREW	2	1-26	16326S126	SCREW	4
1-2	16326S102	WASHER	2	1-27	16326S127	WASHER	4
1-3	16326S103	EVEN MAT	2	1-28	16326S128	EVEN MAT	4
1-4	16326S104	HIGH PRESSURE HAT	1	1-29	16326S129	OIL SEAL	2
1-5	16326S105	HIGH PRESSURE COIL	1	1-30	16326S130	FRONT HALF CRANK CASS	1
1-6	16326S106	THE SPARK FILLS	1	1-31	16326S131	ANNUL	1
1-7	16326S107	MUFFLER	1	1-32	16326S132	BALL BEARING	1
1-8	16326S108	SLAD	1	1-33	16326S133	CRANK CASE CASKET	1
1-9	16326S109	SCREW	2	1-34	16326S134	KEY	1
1-10	16326S110	WASHER	2	1-35	16326S135	CRANK SHAFT COMP	1
1-11	16326S111	EVEN MAT	2	1-36	16326S136	REAR HALF CEAND CASS	1
1-12	16326S112	RUBBER PLUG	1	1-37	16326S137	STARTER PULLEY	1
1-13	16326S113	SCREW	2	1-38	16326S138	STARTER PAWL SPRING	1
1-14	16326S114	MAGNBTO STATOR	1	1-39	16326S139	STARTER PAWL	1
1-15	16326S115	HEAT UNSULATION PAD	2	1-40	16326S140	CYLINDER WASHER	1
1-16	16326S116	CYLINDER	1	1-41	16326S141	SCREW	2
1-16K	16326S116K	Cylinder Block Assy (Including Piston Assy)	1	1-42	16326S142	INLET MANIFOLD	1
1-17	16326S117	CYLINDER WASHER	1	1-43	16326S143	CARBURETOR	1
1-18	16326S118	PISTON RING	2	1-44	16326S144	CARBURETOR	1
1-19	16326S119	PISTON RING	1	1-45	16326S145	BREEZE A HAND HANDLE	1
1-19K	16326S119K	Piston Assy (Including Ring Set, Pin & circlip)	1	1-46	16326S146	BREEZE DOOR	1
1-20	16326S120	PISTON PIN	2	1-47	16326S147	THE EMPTY COLANDER INSIDE COVERS	1
1-21	16326S121	PISTON PIN CIRCLET	2	1-48	16326S148	SCREW	1
1-22	16326S122	STOP RING	2	1-49	16326S149	SCREW	2
1-23	16326S123	NEEDLE BEARING	1	1-50	16326S150	ELEMENTO FILTRO	1
1-24	16326S124	CONNECTING SHAFT	1	1-51	16326S151	EMPTY COVER OUTSIDE THE COLANDER	1
1-25	16326S125	MAGNBTO ROTOR	1	1-52	16326S152	BIG A BOLT	1

FIG : 2 : GBV326S Brush Cutter Explosive Picture

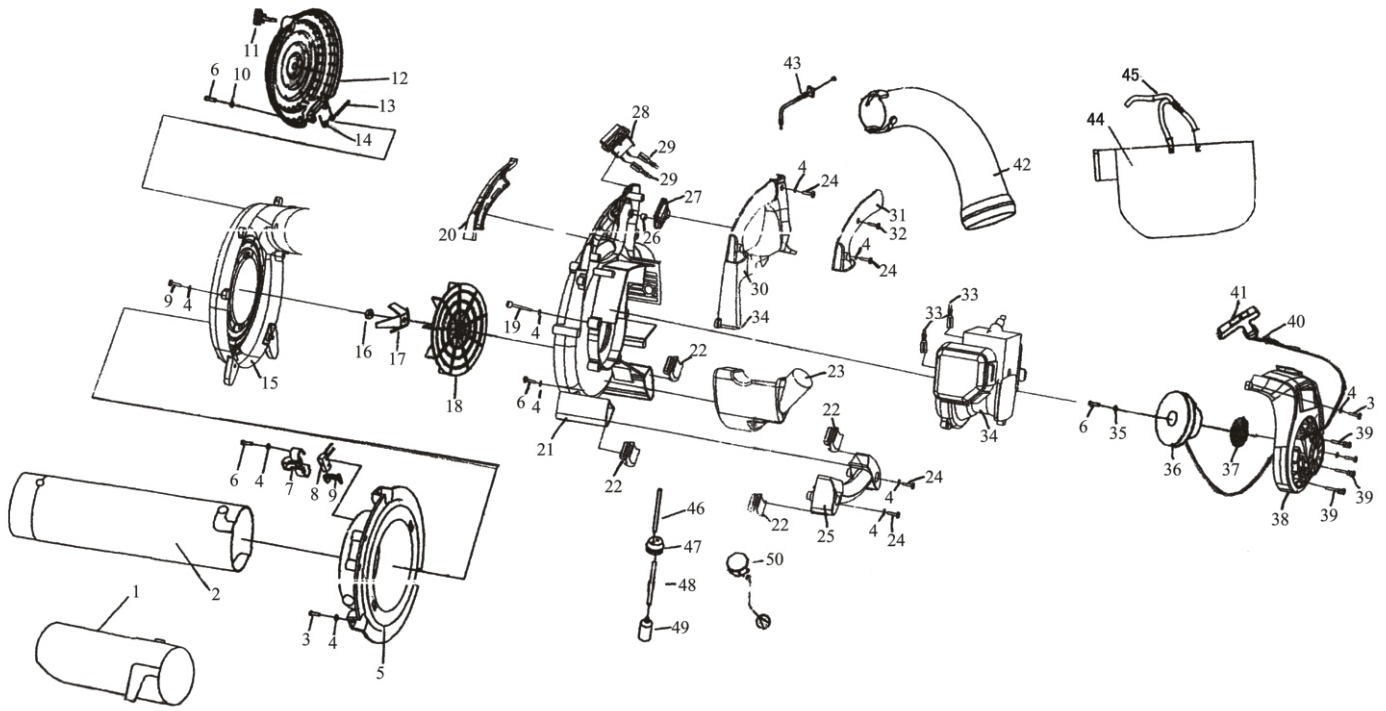

Ser.NO.	Code	Part Name	Qty	Ser.NO.	Code	Part Name	Qty
2-1	16326S201	INHALE PIPE NO.1	1	2-26	16326S226	THROTTLE LEVER SHAFT	1
2-2	16326S202	INHALE PIPE NO.2	1	2-27	16326S227	THROTTLE LEVER HANDLE	1
2-3	16326S203	SCREW M5×16	14	2-28	16326S228	STOP SWITCH COMP	1
2-4	16326S204	WASHER 5	26	2-29	16326S229	SHORT STOP WIRE	2
2-5	16326S205	CONNECT COVER	1	2-30	16326S230	UPPER HANGLE	1
2-6	16326S206	SCREW M5×10	4	2-31	16326S231	RIGHT HANGLE RUBBER COVER	1
2-7	16326S207	CONNECTER SAFETY COVER	1	2-32	16326S232	ST4.2×10	1
2-8	16326S208	SAFETY SWITCH	1	2-33	16326S233	STOP WIRE	2
2-9	16326S209	BUTTON CONNECTER	1	2-34	16326S234	GASOLING ENGING	1
2-10	16326S210	WASHER 6	1	2-35	16326S235	WASHER 5	1
2-11	16326S211	SCREW	1	2-36	16326S236	STARTER POPE REEL	1
2-12	16326S212	FAN NET COVER	1	2-37	16326S237	COLE SPRING	1
2-13	16326S213	WREST SPRING SHAFT	1	2-38	16326S238	VOLUTE CASE	1
2-14	16326S214	WREST SPRING	1	2-39	16326S239	SCREW M4×30	3
2-15	16326S215	REAR COCHLEA CASS	1	2-40	16326S240	STARTER POPE	1
2-16	16326S216	NUT M8×1	1	2-41	16326S241	STARTER HANDLE	1
2-17	16326S217	SHATTER TOOTH	1	2-42	16326S242	TAIL PIPE	1
2-18	16326S218	IMPELLER	1	2-43	16326S243	THROTTLE WRIE COMP	1
2-19	16326S219	SCREW M5×30	4	2-44	16326S244	LEAVES ASSY	1
2-20	16326S220	LEFT HANDLE RUBBER COVER	1	2-45	16326S245	HARNES ASSY	1
2-21	16326S221	FRONT COCHLEA CASE	1	2-46	16326S246	RETURN FUEL PIPE	1
2-22	16326S222	PEDESTAL	4	2-47	16326S247	FUEL PIPE RUBBER BUNG	1
2-23	16326S223	FUEL TANK	1	2-48	16326S248	INLET FUEL PIPE	1
2-24	16326S224	SCREW M5×20	4	2-49	16326S249	FILTER CLEANER	1
2-25	16326S225	LOWER HANDLE	1	2-50	16326S250	LID ASSY	1